

Radio Control System Rx868/2 Rx433/2 Rxw868/2 Rxw433/2

Connecting:

Power supply: IN1, IN2

Device 1:

NO1-COM1 (NO-contact)
NC1-COM1 (NC-contact)

Device 2 (2-channel only):

NO2-COM2 (NO-contact)
NC2-COM2 (NC-contact)

Storing the transmitter code:

1. Remove the housing cover.
2. Press button TA1 for approx. 3 sec.
3. The LED is flashing for approx. 10 sec.
4. During the 10 sec. press the transmitter button.
If the radio control system has stored the transmitter code, the LED flashes rapidly for approx. 2 Sec.
5. *2-channel only*: Repeat steps 2-4 pressing button TA2 and another transmitter button (channel 2).
6. Snap in the housing cover.

Specifications:

Power supply: 12-24V AC/DC

Input current:

1-channel approx. 35 mA
2-channel approx. 50 mA

Function selectable with Jumper J1:


J1 Pos. 1-2 Dead-man's button mode
J1 Pos. 2-3 Impulse mode

Output rating:

60V DC/1A/30W
125V AC/1A/62VA

Temperature range: -20°C to +60°C


Housing IP 00:

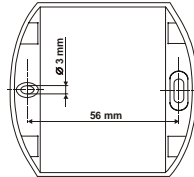


Housing IP 65:



Garage Door Operator:

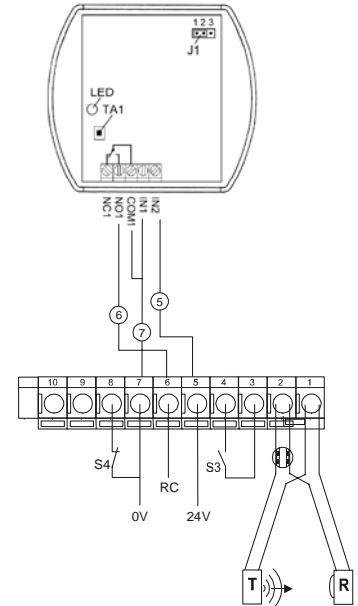

1-channel model:

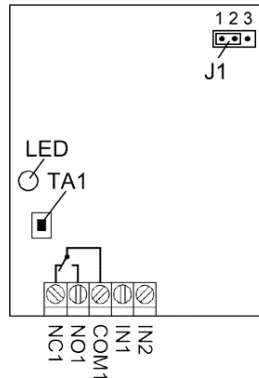

2-channel model:

